


PRAXYM

RBK | Rapid Broadband Kit

SETUP

1

PRODUCT OVERVIEW

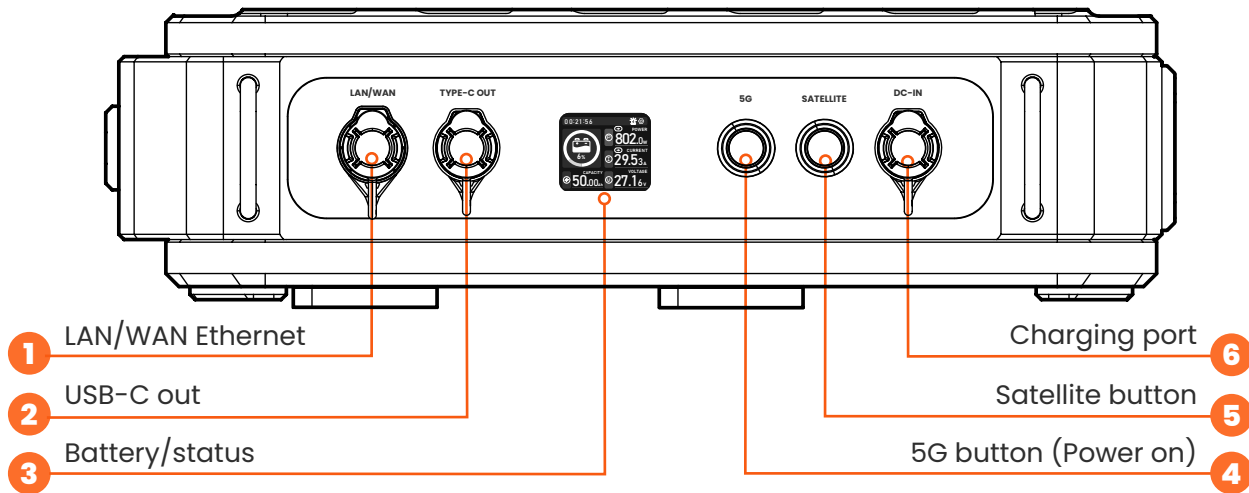

2

KEY SPECIFICATIONS

Weight



Total 7.87kg
(inc. battery, router & LEO)

Dimensions



320mm x 399mm
x 106mm

Mounting



4x M6 universal
mounting holes


Battery Access



Battery access
door at base

3


LCD STATUS SCREEN

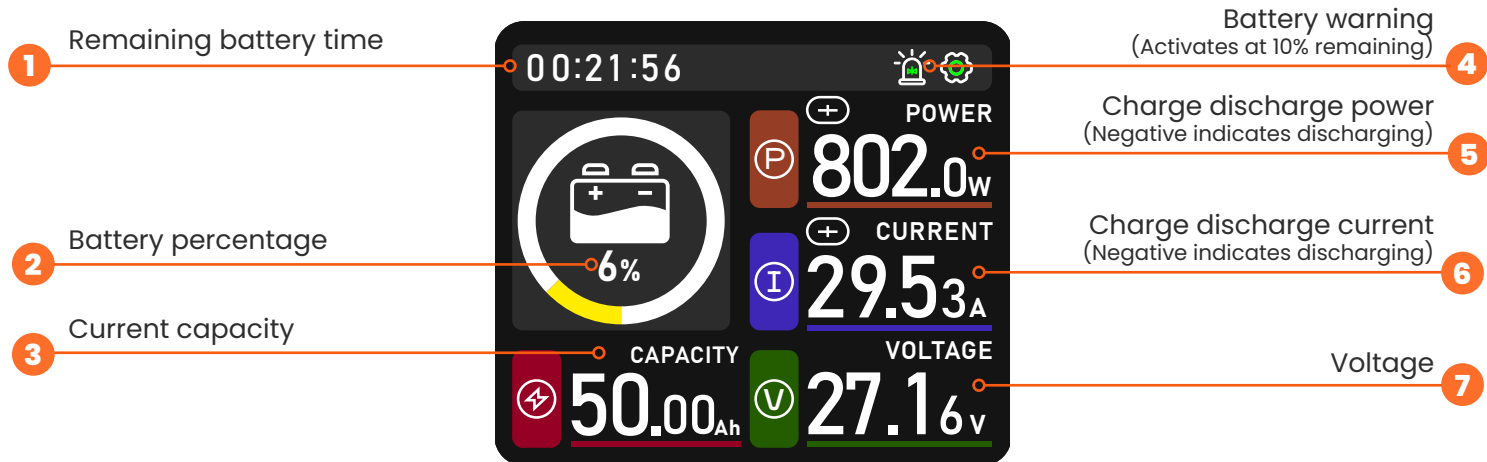

4


BEFORE YOU BEGIN

 1



Place the RBK on a stable surface

2

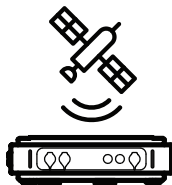

If using Satellite, ensure the RBK lies flat with a clear view of the sky

3



Avoid excessive heat, moisture and direct sunlight when possible




Ensure the RBK has sufficient charge before use

5


POWERING ON

1

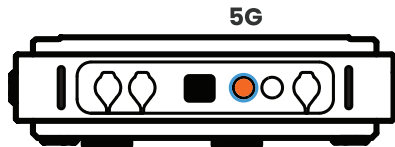


Press the 5G button until it clicks and illuminates blue

2

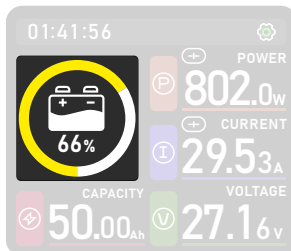

Check for sufficient charge before use

3

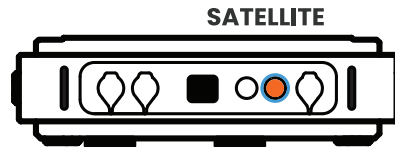

If required, turn on Satellite.
Press Satellite until it clicks and illuminates blue



Do not repeatedly turn the device on and off

6

CONNECTING YOUR DEVICE

1



On your smart device, search for RBK network SSID name

 
2



Connect to Wi-Fi using the SSID and password provided

3

LAN/WAN



If required, connect via Wired connection using the external WAN/Ethernet port



100+ concurrent users via Wi-Fi **and** Ethernet connections (config. dependent)

7

OPERATING GUIDANCE

1

 
5G



Use 5G as default option. The device will operate for up to 45 hours


2

SATELLITE



If the device does not receive a 5G connection within 5 minutes, turn on Satellite

3

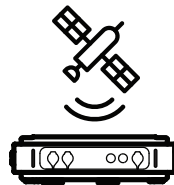

If using Satellite, ensure the RBK lies flat with a clear view of the sky




Using Satellite will reduce battery life to 8 hours. Revert to 5G when possible

8

SIGNAL STRENGTH

1

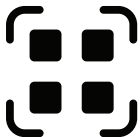


If you have poor signal strength, scan the QR code on the device to see signal map

2



Use the signal map on your smart device to determine a better signal location

3

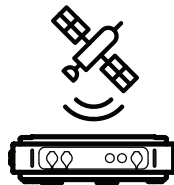

Move the device to the new location

 


Finding better 5G signal will provide better battery life vs. turning on Satellite

9


CHARGING

1




Locate external DC charging port

2

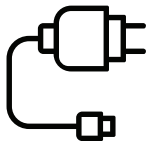

Connect the approved charger

3

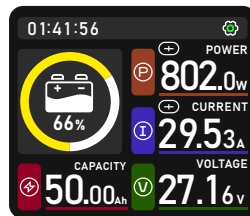

Confirm the device is charging via the LCD battery indicator




Only use supplied chargers. Keep charging area clean and dry

10


POWERING OFF

1

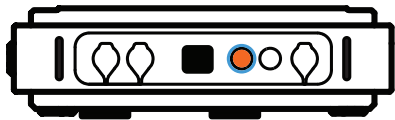


Turn the device off by pressing 5G (and Satellite, if on)

2

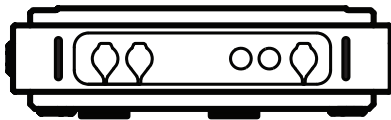

Blue lights and LCD screen will turn off

3

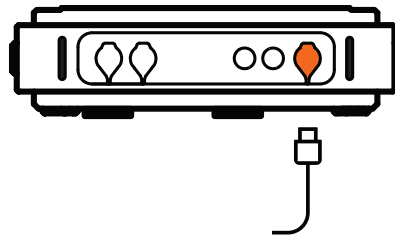

Disconnect any attached cables



Wait until shut down is complete before connecting charger

1

It is normal for the device to become hot, especially during:

- Long periods of use, especially in direct sunlight
- Charging
- Using Satellite

2

To help reduce heat build-up:

- Keep out of direct sunlight and allow air to circulate
- Do not cover or leave in a warm vehicle while the device is on
- Keep away from other heat sources

3


If the device becomes very hot:

- Move to a cooler, shaded area
- Switch off if safe to do so
- Allow it to cool down
- Contact UK Connect support if the issue continues.



There are built-in battery and electrical safety systems which help protect the equipment. If required, these systems may automatically reduce performance or shut the device down to prevent damage.

Full guide

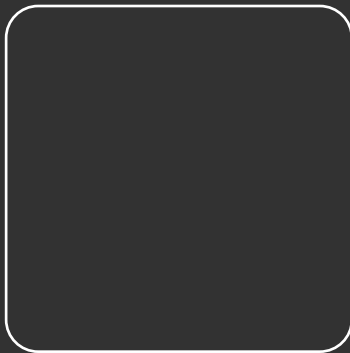

For more information

praxym.io
defence@ukconnect.com
0333 900 9860



PATENT PENDING – GB 2609959.8